




Cutting and Installation manual while coil spring - round smaller than cushion buffer

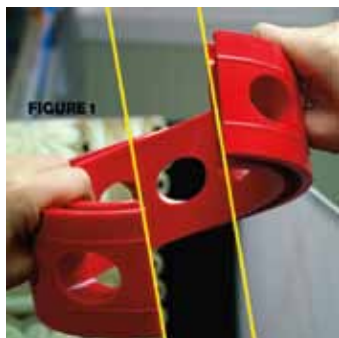

Correct installation

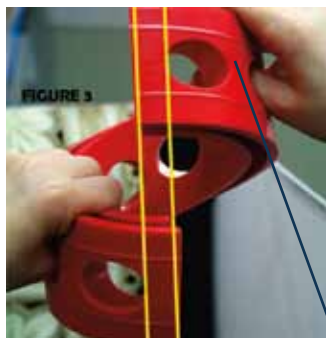

Wrong installation

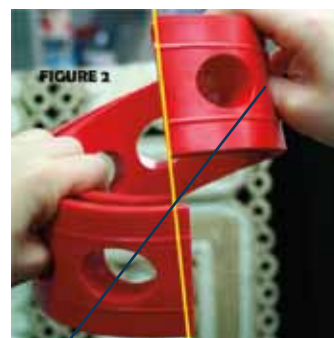

Wrong installation

It should be cut this part (Left edge part of one hole)



Need at least 7mm-10mm interval after cut

Cut one hole : We called + size
Cut two hole : We called ++ size



It will be made buffer function while over 50% rounded - to be covered Coil spring!